

CONTENTS

1.	SAFETY	3
2.	INTRODUCTION	4
3.	FEATURES	4
4.	REMOTE CONTROL	5
5.	FRONT PANEL	6
6.	REAR PANEL	6
7.	CONNECTING YOUR SYSTEM	7
8.	BASIC OPERATIONS	8
8.1	TURN ON STB.....	8
8.2	POWER.....	8
8.3	CHANNEL UP/CHANNEL DOWN	8
8.4	VOLUME UP/VOLUME DOWN-.....	8
8.5	NUMBER.....	8
8.6	MUTE	8
8.7	PAUSE.....	8
8.8	RECALL	8
8.9	FAVORITE.....	8
8.10	AUDIO	9
8.11	INFORMATION	9
8.12	EPG.....	9
8.13	TV/RADIO.....	10
8.14	CHANNEL LIST	10
8.15	SLEEP.....	11
8.16	PAGE UP/PAGE DOWN	11
8.17	TEXT	11
8.18	SUBTITLE	11
8.19	FIND.....	11
8.20	ZOOM.....	11
8.21	MENU.....	11
8.22	VIDEO FORMAT.....	11
8.23	EXIT	12
9.	SERVICE	12
9.1	ORGANIZING SERVICE	12
9.2	ORGANIZING FAVOURITES.....	14
10.	INSTALLATION	15
10.1	SATELLITE INSTALLATION	15
10.2	FASTSCAN SATELLITE	17
10.3	AUTO INSTALLATION	18
10.4	SATELLITE GUIDE	18
10.5	TERRESTRIAL INSTALLATION.....	18
10.6	CABLE INSTALLATION	19
11.	PREFERENCE	20
11.1	LANGUAGE	20
11.2	PARENTAL CONTROL	20
11.3	TIME SETTING.....	21
11.4	TIMER	21
11.5	A/V CONTROL	23
11.6	MISCELLANEOUS SETTINGS	23
11.7	OSD SETTING	24
12.	SYSTEM	25

12.1	INFORMATION	25
12.2	DEFAULT SETTING	25
12.2.1	Default Value:	25
12.2.2	Delete All Channels:	26
12.2.3	Save default value	26
12.3	SOFTWARE UPGRADE.....	26
12.4	UPGRADE BY USB.....	27
12.5	BACKUP TO USB.....	27
13.	CONDITIONAL ACCESS	28
13.1	CA SETTING.....	28
14.	USB.....	28
14.1	FILE LIST	28
14.1.1	Record Files.....	28
14.1.2	MP3 Files.....	29
14.1.3	Image Files.....	30
14.1.5	Software	32
14.1.5	All.....	32
14.2	STORAGE INFORMATION	32
14.3	PVR SETTING	33
14.4	USB SPEED TEST	33
14.5	REMOVE USB DEVICE SAFELY!	33
15.	INTERNET.....	33
15.1	NETWORK LOCAL SETTING.....	34
15.2	HTTP UPGRADE.....	34
15.3	FTP UPGRADE	35
15.4	FTP.....	35
15.5	WEATHER FORECAST	35
15.6	RSS READER	36
15.7	YOUTUBE.....	36
15.8	GOOGLE MAPS	37
16.	GAME	37
16.1	TETRIS	37
16.2	SNAKE.....	37
16.3	OTHELLO	37
17.	NEW FEATURES	39
17.1	EQUALIZER	39
17.2	TIME SHIFT	39
17.3	RECORD	39
18.	TROUBLE SHOOTING.....	40
19.	SPECIFICATIONS.....	41



Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.

1. SAFETY

This HD Receiver has been manufactured to satisfy the international safety standards. Please read the following safety precautions carefully.

MAINS SUPPLY: 100 - 240V AC 50/60Hz

OVERLOADING: Do not overload wall outlet, extension cord or adapter as this may result in fire or electric shock.

LIQUIDS: Keep liquids away from the HD Receiver. The apparatus should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

CLEANING: Disconnect the HD Receiver from the wall outlet before cleaning .Use a light damp cloth (no solvents) to dust the HD Receiver.

VENTILATION: The slots on top of the HD Receiver must be left uncovered to allow proper airflow to the unit. Do not stand the HD Receiver on soft furnishings or carpets. Do not expose the HD Receiver to direct sunlight or do not place it near a heater. Do not stack electronic equipment on top of the HD Receiver.

ATTACHMENTS: Do not use any attachments that are not recommended as these may cause hazard or damage the HD Receiver.

CONNECTION TO THE SATELLITE DISH LNB: Disconnect the HD Receiver from the mains before connecting or disconnecting the cable from the satellite dish.

FAILURE TO DO SO CAN DAMAGE THE LNB.

CONNECTION TO THE TV: Disconnect the HD Receiver from the mains before connecting or disconnecting the cable from the satellite dish.
FAILURE TO DO SO CAN DAMAGE THE TV.

EARTHING: The LNB cable **MUST BE EARTHED** to the system earth for the satellite dish.

LOCATION: Place the HD Receiver indoors in order not to expose to lightening, rain or sunlight.

2. INTRODUCTION

Thank you for purchasing this HD Receiver.

This HD Receiver is fully compliant with the international DVB standard and thus transmits digital images, sounds, information guides and teletext directly to your TV through the satellite broadcasting. Now you can comfortably see and receive digitally transmitted music, news, movie and sports satellite broadcasts in your office or at your home. You can enjoy interesting games embedded in HD Receiver.

In service search section, both the automatic service search method and the manual search mode are provided. Also it supports DiSEqC 1.0, 1.2 and USALS, enabling you to move your antenna in order to focus preferred satellite. You can save up to 6000 TV and Radio services and work around with the favorite, Lock, Delete, Move and Sort functions.

The menu is very modern and supports multiple languages. All functions can be carried out using the remote control . The HD Receiver is easy to use and adaptable for future advances. Please be aware that new software may change the functions of the HD Receiver.

If you have any difficulties concerning the operation of your HD Receiver, please refer to the relevant section of this manual, including the 'Troubleshooting'. This Manual will provide you with useful information on using this HD Receiver.

3. FEATURES

- High Definition STB decoder, Full HD 1080p output via HDMI
- CONAX CAS7 embedded
- Under 0.5 Watt Standby power consumable
- Hybrid tuner for DVB-S2, DVB-T2/T/C
- S/PDIF for digital audio or Dolby digital bit stream output
- DiSEqC 1.0, 1.1, 1.2 ,USALS and Unicable supported
- USB 2.0 Host, USB-WIFI supported
- RJ45 for 10Mbps Ethernet interface
- Video Decoding: MPEG-4/H.264, MP@ML, MP@HL,MP@HL, MP@4.1, HP@L4.1, XVID, DIVX
- Audio Decoding: LPCM,AAC-LC,HE-AAC,MP3,Dolby plus
- 6000 channels (TV and Radio) programs
- Electronic Program Guide (EPG)
- Subtitle supported
- Teletext supported by VBI insertion and software emulation
- PVR Ready, Recording and TimeShift
- Blind scan, Fast scan and LCN function
- Parental lock facility by channel and program event
- RTC(Real-Time-Clock)
- Full Picture In Graphic(PIG) function
- Multilingual menu text supported
- Software upgrade via USB, Http, FTP and RS232
- 145mm×35mm×110mm(B×H×T)

4. Remote Control



You can power on/off the receiver, operate on screen menu, and use a variety of hot key function.

 **POWER**

To switch your receiver on from standby or standby to on.

 **MUTE**

Used to enable or disable the audio

NUMERIC KEYS

Used to select channels or enter programming parameters

TV / RADIO

Receiver switches between TV and Radio mode.

 **(ZOOM)**

Press  key select zoom times, from X1 to X16.

 **RECALL**

Return to the previous menu or status.

TV/SAT

Receiver switches between TV and receive mode.

INFO

To display channel status or various program information of current service.

EPG(Electronic Program Guide)

Display the Programs guide on screen when available.

MENU

Displays the Main Menu on the screen, or return to the previous menu or status.

EXIT

Cancel the user selection and return to the viewing mode from a menu.

OK

To select menu option, or to updated on entry.

<,> KEY

To adjust volume level, or to move cursor left or right in the menu.

^,v KEY

To change channels, or to move cursor up or down in the menu.

PAGE+/PAGE-

To move up the cursor to the next or previous page in the menu or channel list.

●REC

Has different functions per menu.

Teletext

Shows teletext information of the current channel supports.

Subtitle

Subtitle Display.

F1

In case your TV is connected through RF Modulator (UHF), select output channel number between CH21 and CH69 with up and down key.

 **(FIND)**

Use to prompt find channels sort by character.

 **TIMER**

Press timer key you can setup up the Standby time.

V. FORMAT

Press V.FORMAT button to switch the display mode among "AUTO", "480i", "480p", "576i", "576P", "720P_50", "720P_60", "1080i_50", "1080i_60", "1080P_50" and "1080P_60"

FAV(FAVORITE)

To set receiver to the favorite server mode, display the favorite channel.

 **FOLDER**

Press this button to enter the Record Manager menu directly.

AUDIO(Red Key)

Audio channels setup, to select audio mode; Left, Right, Stereo, Mono.

OPTION(GREEN KEY)

Shows NVOD information of the current channel supports.

SAT

Display the satellite list at normal picture.

English

Play Mode

Select the play mode in MP3 or JPEG player.

USB

To remove the USB Hard Disk safely.

TMS(Time Shift)

Press this button to display Time Shift info bar.

Play

To play the MP3, JPEG, or Record files.

Stop

To stop the Time Shift, recording, or MP3/JPEG player.

PAUSE

Used to select the freeze function.

Press once to freeze the screen picture.

FB

To start Fast Backward function.

FF

To start Fast Forward function.

SB

To start Slow Backward function.

SF

To start Slow Forward function

PREV/NEXT

Switch to preview or next file in play mode

5. Front panel

Remote Sensor: Detects infrared signal from remote control unit.

POWER Indicator: while the receiver is power on and at standby mode.


Signal Indicator: When receiving signal is strong, the signal indicator is lighted.

Card Slot: One CA Interface for Conax.

USB: USB 2.0 Host, connect to USB hard disk, flash disk or USB wifi dongle. (on the left side of the receiver)

Display: (LED type) Indicates operating status of receiver.

6. Rear Panel

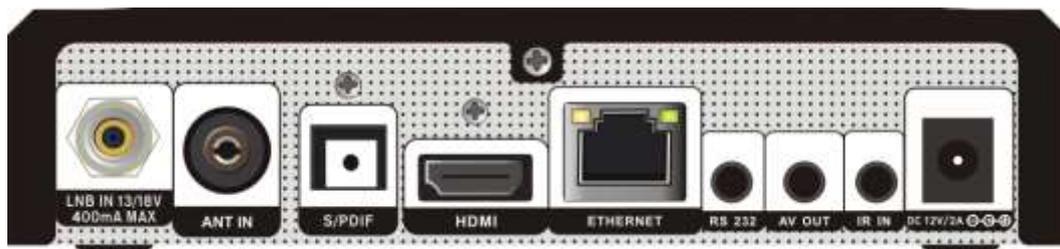

Please refer to the diagram above for all possible connections of your receiver

Do not connect the unit to the mains socket until all other connections have been connected and checked.

Your configuration can vary depending on model.

LNB IN 13/18V 400mA MAX: This port is to connect the coaxial cable from LNB of your Dish.

ANT IN: This port is to connect the coaxial cable from terrestrial antenna or cable.

S/PDIF: Digital Audio interface, connect to AV amplifier S/PDIF input terminal.

HDMI: Audio and Video output socket for TV set with HDMI Input Jack only

ETHERNET: This is used for internet connection.

RS 232: This port is used to connect your receiver and computer through a serial cable.

AV OUT: This RCA connector is used to connect TV using RCA cable.


IR IN: Connect an External IR-Sensor (Infrared).

DC 12V: This is used to connect an external 12V adapter.

7. Connecting Your System

There are two ways to connect the receiver to your existing TV system. We recommend using one of the following cases for the best result:

1. If you have a high definition television set, you should use a HDMI cable for best result, Plug one end of the cable into the HDMI socket on the receiver, and the other end into the matching socket on your television. In this case, you do not have to make audio connections because the HDMI connector can output stereo audio or Dolby digital audio.
2. Connect one end of RCA cable to the AV mini jack on the back of the receiver and the other end to a AV mini jack on your TV.

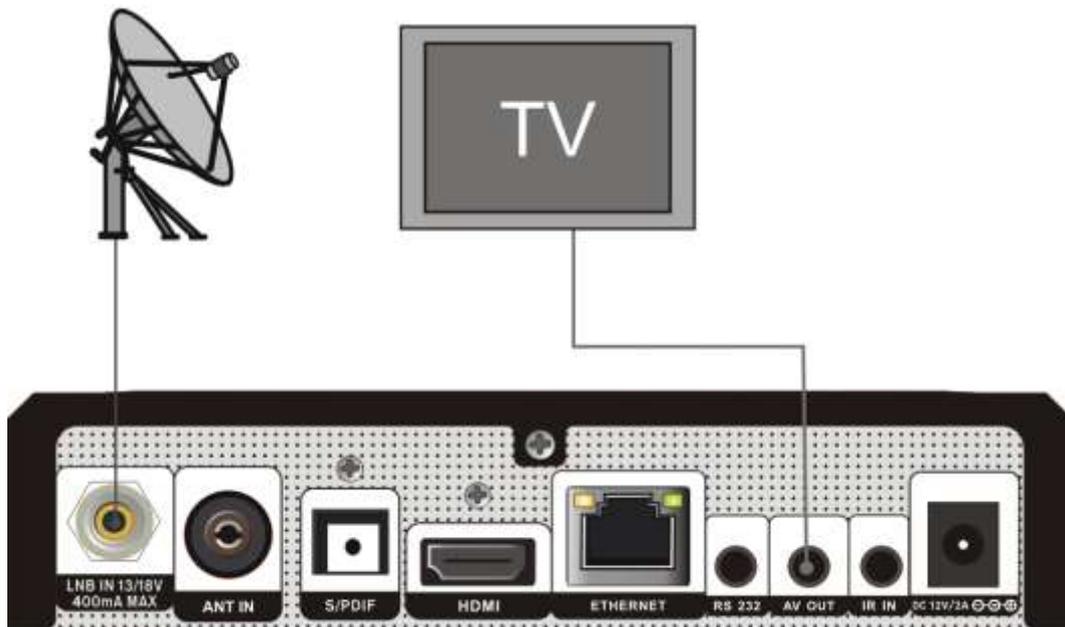

Finally connect the coaxial cable from the LNB to the LNB IN jack on the receiver.

With External Audio / Hi-Fi System

To connect any external Audio Hi-Fi system, the receiver has been provided with RCA connector at the back of the receiver marked with AV OUT.

Connect an RCA cable from the AV OUT jack on the back of the receiver to the LINE, AUX, SPARE OR EXTRA input jacks on your Hi-Fi System.

7.1 TV with Motorized System (DiSEqC 1.2)

Connect one end of your coaxial cable to the LNB IN connector on the receiver and the other end to the REC or Receiver connector on the DiSEqC 1.2 motor.

Connect the coaxial cable from the LNB to the LNB connector on the DiSEqC 1.2 motor.

All our receivers are designed to be DiSEqC 1.0 and DiSEqC 1.2 compatible.

This allows multiple antennas to be connected to the receiver at the same time.

If you have two or more fixed antennas or LNBs, then we recommend you use a DiSEqC 1.0 switch.

Connect the coaxial cable from the first LNB to the LNB 1 or LNB A input connector of the DiSEqC switch.

Do the same for any other LNBs that you have.

Connect one end of a coaxial cable to the RF output connector of the DiSEqC switch, connect the other end to the LNB IN socket on the receiver.

To the digital receiver, you can connect either a single satellite antenna directly or LNB of multi-feed equipment.

8. Basic Operations

8.1 Turn on STB

First, press the [Device's Main Power] to turn on the unit. When the STB is first used, it will play the first channel from the default Channel List. If it's not the STB's first use, STB will play the same channel viewed before turning off.

? Frequently Asked Question

Q: The power of my STB has been turned on and not in Standby mode, but the TV screen showed nothing:

A: Make sure the TV set has been set to the correct video input (not the TV channels). For example, if you have connected the unit with the Video1 input of the TV set, the TV set has to be switched to Video1.

Q: The power of my STB has been turn on and not in Standby mode, but the TV screen showed nothing except one box with "No Signal" image.

A: That means the channel, which you select, is no signal. It could be several causes:

- 1 The channel which you select is not in your allocate satellite. The simply solution is to change channel.
- 2 The signal of current TV channel is too weak. You can try to change channel to other strong signal channels. If the problems still exist, please consult your local dealer or other professionals for technical service.
- 3 You use the Dual LNB, and you need Modify LNB Type

8.2 Power

- 1 Press [Power] Key can enter the Standby mode
- 2 In Standby mode, press [Power] Key again to call back the unit and go to the previous channel
- 3 User can also disconnect the device's main power to end the Standby mode.

8.3 Channel Up/Channel Down

In full screen, press [CH+/CH-] to change channel.

8.4 Volume Up/Volume Down-

In full screen, press [VOL+/VOL-] to adjust volume.

8.5 Number

In full screen, use numeric keys and press [OK] on the Remote Control Unit to change channel.

8.6 Mute

- 1 Press [MUTE] key to mute the sound and the screen will show mute OSD icon.
- 2 Press [MUTE] key again to restore sound.

8.7 Pause

- 1 In playing mode, press [Pause] key, the picture will be paused, but the sound of the channel will still continue.
- 2 Press [Pause] key again, the screen's picture will skip over to the current playing picture, and the sound of the channel will play correspondingly.

8.8 Recall

Press [RETURN] key will directly switch to the previous channel that you played before current channel.

8.9 Favorite

- 1 In full screen, press [FAV] key, it will display the "Favorite list" window on the left of the screen, which you can watch like below.



- 2 In the " Favorite list " window you can move highlight by pressing [Channel Up/Channel Down] key to select favorite Channels.
- 3 In the " Favorite list " window you can press [Left/Right] key to select favorite groups, Pressing [P-/P+] keys can implement the "Page up/Page down" function
- 4 Press [Exit] key to exit the current window.

? Frequently Asked Question

Q: Why does the screen display “No Favorite Channel”, after pressing [Favorite] key?

A: It is because you haven't set any channels as "favorite channel". Please refer to Favorite

8.10 Audio

- 1 In full screen, press [AUDIO] key to open the "Audio" window on the screen.



- 2 You can modify the audio track by pressing [Channel Up / Channel Down] key and modify the audio mode by pressing [Volume Up / Volume Down] key.
- 3 Mode: Left/Right/Stereo/Mono

8.11 Information


In full screen, press [INFO] key (press [INFO] key and [RED] key) to open information screen, the window shows the parameters of current channel.




8.12 EPG

- 1 The STB has an Electronic Program Guide (EPG) to help you navigate channels through all the possible viewing options. The EPG supplies information such as channel listings and starting/ending times for all available channels.

Press [EPG] key to display EPG screen.

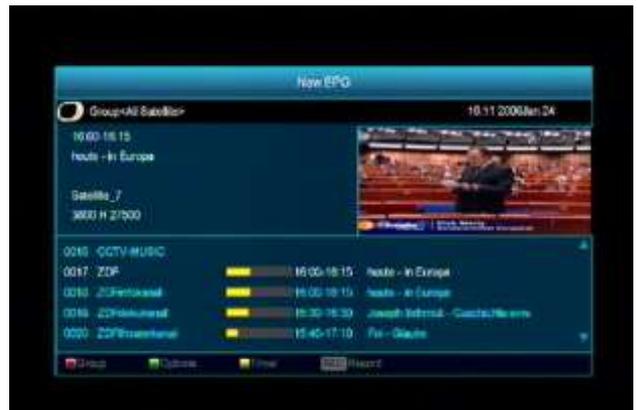

- 2 Press [Red] key to select the channels by different group, such as by Favorite/Satellite/Provider/CAS etc.
- 3 Press [Green] key to select different display modes among Now EPG, Next EPG, More and Schedule, like the following picture:

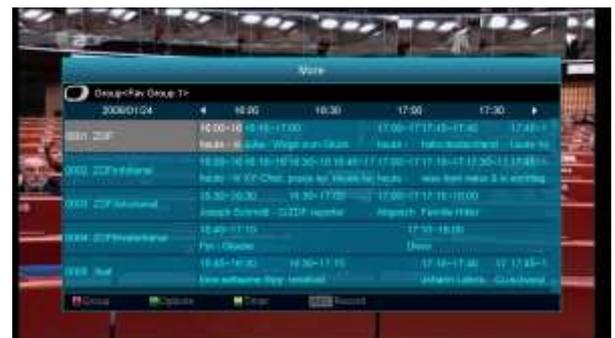

- 4 Press [Yellow] key in EPG menu to set a record timer or go to Timer List menu.



- 5 In EPG menu, when you select one event by highlighting item, you can set this event to record timer list directly by pressing [REC] button.
- 6 In EPG menu, press [Exit] to close EPG screen.

8.13 TV/RADIO

In TV mode, pressing [TV/RADIO] key can switch to Radio mode. In Radio mode, press [TV/RADIO] key to switch to TV mode.

8.14 Channel List

- 1 In full screen, press [OK] key to enter "Channel List".



- 2 Press [Red] key to change the different group which you can watch, like below.



- 3 Press [Green] key to display details information for EPG Now.



- 4 Press [Yellow] key to change the current channel's property, such as FAV/ Lock/ Skip/ Delete/ Rename.



- 5 Press [Blue] key to open the "Sort" window like below. There are five kinds of sorting ways. You can press [Channel Up/Channel Down] key to move highlight and press [OK] key to confirm your selection.



- 6 The five ways of sorting are:
 - ✧ Default: Sorting by scanning result.
 - ✧ FTA/\$: Sort channel through free and scrambled sequence. Free channels will appear at the beginning of the channel list and scrambled channels will appear at the end of the channel list .

- ✧ Lock: Accumulate all locked channels and list in the end of TV Channel List.
 - ✧ Name (A-Z): Sort in Alphabetical Order, ignore "\$" symbol.
 - ✧ Name (Z-A): Sort in Alphabetical Order, ignore "\$" Symbol.
- 7 Press [Up/Down] key to move highlight and press [OK] key to play the highlighted channel.
 - 8 Press [P -/ P +] key to page up and page Down.
 - 9 Press [Exit] key to exit the channel list.

8.15 Sleep

- 1 This function can set sleep timer. When you set a sleep timer and the time arrives, the system will automatically enter standby mode.
- 2 Pressing [SLEEP] key, it will switch the mode between Sleep Timer Off /10/30/60/90/120 minutes.

8.16 Page Up/Page Down

In Channel list, press [Page+/Page-] key to page up and page down the channel list.

8.17 TEXT

- 1 Press [TTX] key in full screen, you can open teletext page on any channel which has teletext information.
- 2 If the channel has no teletext information, it will show "No Teletext Data" on the screen.

8.18 Subtitle

- 1 Press [Subtitle] key in full screen, you can switch subtitle on or off.
- 2 If the channel has no subtitle information, it will show "No subtitle Data" on the screen.

8.19 Find



- 1 Press [Find] key in full screen can open the "Find" window like above. You can press [Channel Up/Channel Down/Volume Up/Volume Down] key to move highlight and press [OK] key to input the selected symbol or letter into the dialogue.
- 2 After input each character, the program list on the left will search the channel according to your input and list the matched channel.
- 3 Move highlight to "OK" and press [OK] key to close "Find" window and you can select channel from the channels list directly.

8.20 Zoom

- 1 The [ZOOM] key allows you to magnify a certain area on the images
- 2 Press [ZOOM] key again, the image will enlarge by x1, x2, x4, x6, x8, x12, x16.
- 3 In "x2 ~ x16" image, use [Up/ Down/ left/ right] key to move the image center area you want to see.
- 4 In zoom mode, press [Exit] to close "Zoom" window.

8.21 Menu

- ✧ Press [MENU] key to open the menu, exit the current menu to previous menu or close the window.

8.22 Video Format

- 1 Press [P/N] (white) key under Full Screen playback for 1st, it will show the current system output video resolution, continuously press this key & system will switch its output video resolution by sequence "Auto->480i-> 480P-> 576i-> 576p-> 720P-50>720P-60>1080i-50>1080i-60>1080p-50 >1080p-60".



8.23 Exit

- 1 Press [EXIT] key to exit the current menu to previous menu or close the window.

9. Service

When you press [Menu] key to enter menu, there will display the picture like below:



- ✧ Press [Up/Down] key, you can select the submenu Organizing services and Organizing favorites. If Menu Lock is "On", it will display a dialogue box for user to input password. The default Password is "0000".
- ✧ Press [OK] key to enter the "Organizing Service". Press [Menu] key to go back to main menu.

9.1 Organizing Service

When you enter "Organizing Service" menu, there will display the screen like below.



1. You can move highlight by pressing [Channel Up/Channel Down] key and [OK] key to select the programs which you want to edit.
2. You can press [P+/P-] key to implement the Page Up/Page Down function.
3. You can use [Red] key to switch different Group.
4. You can press [Green] key to select the programs by different select mode.
5. Press color key can implement the corresponding function in "Organizing Services".

Groups



- 1 Press [Red] key to open the "Groups" window like above.
- 2 You can press [Up/Down] key to move highlight and press [OK] key to select group.
- 3 Press [Menu] key to close "Groups" List.

Options



1. Press [Green] key to open the “Options” window like above.
2. You can press [Up/Down] key to move highlight and press [OK] key to confirm the select mode.
3. Press [Menu] key to close “Options” List.

Move

1. Select the channels that you want to edit in channel list by pressing [OK] key or other select mode.
2. Then press [Right] key to move the highlight to right toolbar.
3. Select Move icon by pressing [Channel Up/Channel Down] key and [OK] key.
4. Move the channels to the position that you want and press [OK] key to confirm. Like the following picture:



Lock

- 1 Select the channels that you want to edit in channel list by pressing [OK] key or other select mode.
- 2 Then press [Right] key to move the highlight to right toolbar.

- 3 Select Lock icon by pressing [Channel Up/Channel Down] key and [OK] key.
- 4 Lock the channel by pressing [OK] key.
Like the following picture:



Delete

- a) Select the channels that you want to edit in the channel list by pressing [OK] key or other select mode.
- b) Then press [Right] key to move the highlight to right toolbar.
- c) Select Delete icon by pressing [Channel Up/Channel Down] key and [OK] key.
- d) Delete the channel by pressing [OK] key.

Skip and rename

Follow the same way you can set the channel’s Skip or rename for highlighted channel.



Find



1. Press [Find] key can open the “Find” window like above. You can press [Channel Up/Channel Down/Volume Up/Volume Down] key to move highlight and press [OK] key to input the selected symbol or letter into the dialogue.
2. After input each character, the program list on the left will search the channel according to your input, and list the matched channel.
3. Move highlight to “OK” and press [OK] key to close “Find” window and you can select channel from the channels list directly.

Favorite List, press ◀ to choose Remove mode and press “OK” button.

4 Move

You can reorder and move the service to the preferred position in Favorite List.

5 Rename

Select the desired FAV List by pressing “FAV” button, using ◀, ▶ buttons to choose Rename mode and press “OK” button to display keyboard, and rename it.

6 Group, Options and Find functions

Please refer to the “Organizing Services” part in this manual.

9.2 Organizing Favourites

This menu is helpful in adding and deleting services to and from the favorite group.



1 FAV List

Choose the FAV List by pressing “FAV” button.

2 Add

To add services into favorites, mark the desired services by pressing “OK” button in Service List, press ▶ to choose Add mode and press “OK” button.

3 Remove

To remove services from favorites, mark the desired services by pressing “OK” button in

10.Installation



- 1 Press [Left/Right] key to select menu pages among Service, Installation, Preference, System, Conditional Access, Internet,USB and Game.
- 2 Press [OK] key to enter the “Installation” menu. If Menu Lock is “On”, it will display a dialogue box for user to input password. The default Password is “0000”.
- 3 Press [Up/ Down] key to select menu items. Press [menu] key to go back to main menu.

10.1 Satellite Installation

Satellite

- 1 Satellite: Press [OK] key to enter the Satellite list.



- 2 Press [Up/ Down] key to select satellite. Press [Page] key to page up or page down.

LNB Type

In this item, press [left/right] key can switch among “Standard”, “User”, “unicable” and “Universal” mode.

For Example: If you use the unicable LNB, then you should select “Unicable” option in “LNB Type” and press OK button will display the submenu for Unicable setting, like the following picture, you can select the SCIF Channel, SCIF Frequency and Satellite Position according to your LNB type.



DiSEqC1.0/ DiSEqC1.1

DiSEqC: You can use [left/right] key to switch options. There are several options for your selection:

- a) Disable: without DiSEqC.
- b) 1/2, 2/2: two ports DiSEqC
- c) 1/4, 2/4, 3/4, 4/4: 4 ports DiSEqC
- d) 1/8, 2/8... 8/8: 8 ports DiSEqC
- e) 1/16, 2/16....16/16: 16 ports DiSEqC





Positioner

Positioner: In “Positioner” item, you can press [/ Volume Down] key to switch “Off / DiSEqC 1.2 / USALS” functions.

22K

You can use [left/right] key to switch “ON / Off”. When this item is switched to “ON”, receiver will receive TV and radio input signal from 22K port. If the item is switched to “Off”, the receiver will receive all signal from 0K port.

! Notice

When you choose LNB type “Universal”, you cannot modify 22K.

Polarity

In “Polarity” item, [left/right] key to switch “Auto / H / V” functions.

TP Edit

When you enter “TP Edit” menu, there will display the screen like below:



1 In “Satellite” item, press [left/right] key to switch satellite that you want to scan or press [OK] key to enter satellite list for selection.

2 In “TP Index” item, you not only can use [left/right] key to select transponder but you can also use [Add] and [Delete] functions.

✧ When you press [Green] key, it will display “New TP” in “TP Index” item; You should set the parameters of “TP Frequency” and “Symbol Rate” for this new transponder. The parameters of “TP Frequency” and “Symbol Rate” can set using numeric keys. The available range are “3000~13450 MHz” and “1000~45000Ks/s”.

✧ When you press [Yellow] key, there will show up a warning message for reminding whether you want to delete the current transponder or not. If you select “Yes”, the current transponder will be deleted, and the total account of transponder will reduce 1 correspondingly.

✧ When you press [Blue] key, it will display a warning message for reminding whether you want to delete all transponders or not. If you select “OK”, all transponders will be deleted.

3 For the existing transponder, you can also use numeric keys to modify the parameters of “TP Frequency” and “Symbol Rate”.

- 4 When you complete your modification, press [Red] key, it will display a dialog asking the scan mode, program type, scan type and NIT Search on/off. After you set up, press [OK] key to start scanning.
- 5 In the "TP Scan" item, press [Exit] key to exit the scanning and save the current parameters.

Single Scan

- 1 Press [Red] key, it will display a dialog asking the scan mode (means you want to scan all channels or only scan free channels), program type (means you want to scan all channels or only scan TV/Radio channels), scan type (means preset scan, that is searching the existed TP. Automatic Scan means blind scan. There is no need for existing TP info) and NIT Search on/off. After you set up, press [OK] key to start scanning.
- 2 Press [White] key into the blind scanning immediately.

TP Scan

Press [Green] key to scan current TP's programs.

Auto DiSEqC

Press [Blue] key to run Auto DiSEqC function, it can find satellite connection ports automatically.

Blind Scan

Press [White] key take you directly into blind scan mode to scan the current satellite.

Select satellites

When you Press [SAT] key, you will see the screen like below:



1. You can press [ok] button to select one or more satellites and then press [red] button, it will show a dialog asking scan mode, program type, scan type and NIT Search on/off. After you set up, press [OK] key to start scanning.
2. Press [green] button to edit the name and longitude of the select satellite.
3. Press [yellow] button to add a new satellite.
4. Press [blue] button to delete one or more satellites that you have selected.
5. Press [white] button to move the satellite selected (*note: you can only move one satellite*).

10.2 FastScan Satellite

In this menu, you can perform a fastscan by selecting the provider and press OK button on Start Search item.



10.3 Auto installation



“Auto Installation” is a very new and convenient function. It will automatically detect all dishes connected to this machine and scan the available services belonging to the satellite matched according to satellites and transponders data in current database. You don’t have to input any parameter of your antenna settings. Just press “OK” button to enter this “Auto Installation” menu then it starts scanning and shows you the result at the end of scan.

10.4 Satellite Guide

When you enter “Satellite Guide” menu, you will see the screen like below:



“Satellite Guide” is used for user to enter local longitude; local latitude and satellite longitude. By the evaluation from the receiver evaluate the antenna azimuth and antenna elevation; user can follow this guidance to adjust antenna.

- 1 You can use numeric keys to input parameters in “Local Longitude”, “Local Latitude” and “Satellite Longitude”.

- 2 You can use [Left/Right] key to select east or west in “Local Longitude” and “Satellite Longitude”, select north and south in “Local Latitude”.
- 3 Moving highlight to “Start” item and press [OK] key. The lower column on the screen will calculate the corresponding value automatically.
- 4 Orientation means the angle between south and satellite.

Press [MENU] key to draw back to “Main” Menu.

10.5 Terrestrial Installation

Press [OK] key to enter the selected item.



- 1 You can select the Bandwidth according different country.
- 2 You can set the Tuner Power ON/OFF.
- 3 Press [white] key can directly into blind scan mode to scan the current programs.
- 4 Press [Green] key to enter the following menu.



- 2 **Scan Mode.**

- 1 .There are two modes. You can scan channel by channel or by frequency”.
- 2 .When scan band is UHF and region is “France”, the range of Ch No. is from 21 to 69. When scan band is VHF and region is “France”, the range of Ch No. is from 6 to 12.(it’s according to region)
- 3.You can press [left/right] key to select LCN On/Off option.
4. Press [white] key to enter blind scan menu, or press [Green] key to enter TP scan menu.
5. Press [Exit] key to exit the scanning.

10.6 Cable Installation

Press [OK] key to enter the selected item.



1. You can select the Scan Mode, Manual Scan or Blind Scan.
2. You can input the Frequency by use the numeric button of the RCU.
3. You can input the New Frequency by use the numeric button of the RCU, if you set the Scan Mode to Manual Scan.
4. You can input the Symbol Rate by use the numeric button of the RCU.
5. You can select the QAM value among 16QAM,32QAM,64QAM,128QAM and 256QAM.
6. You can turn ON or OFF the NIT Search, if you set the Scan Mode to Manual Scan.
7. You can use numeric keys to input the Frequency for LCN Frequency Scanning.
8. When you complete your modification, press green button on Search item to enter Scan menu and then press green button, it will begin to scan.

11.Preference

When you enter “Preference” menu, you will see the screen like below:



In “Preference” menu:

- Press[Channel Up/Channel Down]key to select menu items among Language, Parental Control, Time setting, Timer, A/V Control, Miscellaneous Settings and OSD Setting.
- Press[OK]key to enter the selected item.

11.1 Language

When you enter “Language” menu, you will see the screen like below:



- 1 Menu Language: press [left/right] key to select menu languages, the selections of languages include: English, Russian, German, Greek, French, Italian, Spanish, Portuguese, Arabic, Polish etc.
- 2 First Audio: Some channels have more than one audio language for choosing; by this function you can set the first audio for this channel. If the

playing channel has the same audio as the “First Audio” you set, system will play this audio language as default. If the channel hasn’t the suited audio language, then the system will compare automatically with second audio language. The selections of audio languages include: English, Russian, German, Greek, French, Italian, Spanish, Portuguese, Arabic, Polish etc.

- 3 Second Audio: If the channel has no corresponded audio with “First Audio” but have corresponded audio with “Second Audio”, system will play the second audio language as default. If no audio language corresponds with the “Second Audio”, then the default language of current channel will be played automatically. The selections of audio languages include: English, Russian, German, Greek, French, Italian, Spanish, Portuguese, Arabic, Polish etc.
- 4 Audio Priority: Press [left/right] key to select Dolby Digital or Language.
- 5 EPG: Press [left/right] key to select EPG language.
- 6 Subtitle Language: Press [left/right] key can select subtitle language.
- 7 Teletext: You can set teletext language. If the streams have this language you can see the teletext in language you set.
- 8 Press [MENU] key to draw back from “Language” menu.

11.2 Parental Control

You can set a password for anyone who wishes to operate in the “Installation” menu. And you can also set the password for the locked channels. (How to set the locked channel please refer to LOCK) Here will show you how to set and how to revise the password.

- 1 In “Parental Lock” function, press [OK] key, there will display a dialogue for you to input the password. When you input the correct password, you will see a screen like below:



- 2 Menu Lock determines that when user wishes to enter “Installation” menu, whether user has to input Password or not. If the setting “Menu Lock” is “ON” this means user have to input password, if set to “OFF” means unlocked.
- 3 Channel Lock determines that when user wishes to play the locked channels, whether user has to input the password or not. If the setting is “ON”, playing the channels with lock mark will show a dialogue on the screen and ask for the password. If the setting “Channel Lock ”is “OFF”, the Lock function will be invalid.
- 4 New Password is used for revising password; you can input the new password in this item by using numeric keys directly. After you filled in 4 numbers, the highlight will auto skip to Confirm Password and ask you to input the new password again. If the password is correct, the screen will show a message “Saving Data, Please Wait...”. After finished saving and draw back to “System Setup” menu, the revising is complete.

Press [MENU] key to draw back from the “Parental Lock” menu.

11.3 Time Setting

When you enter “Local Time Setting” menu, you will see the screen like below:



- ✧ GMT Usage: This item is for the usage of GMT. You can press [left/right] keys to switch “On/Off”.
- ✧ The “GMT Offset” item is valid only when the setting “GMT Usage” is “ON”. You can press [Volume Up / Volume Down] keys to switch “GMT Offset” value, and the range is “-12:00 ~ +12:00”, increase each half hour progressively.
- ✧ You can press [left/right] to control Summer time on or off.
- ✧ “Date” and “Time” items are valid only when the setting “GMT Usage” is “OFF”. You can press [Volume Up / Volume Down] keys to move highlight and use numeric keys to input directly.
If the current channel provides the correct time information, you will see the current time while you enter “Time” menu. If the current channel doesn’t provide time information, you will have to input the date and time information manually.
- ✧ Press [MENU] key to draw back from “Local Time Setting” Menu.

11.4 Timer

Press [OK] key to open timer menu.

- ✧ Current time information will display on the first column; if the current time is incorrect, please modify the time information in “Time” item.
- ✧ Timer Number: You can press [left/right] keys to set Timer number, and there are 8 timers in total.
- ✧ Timer Mode: There are several modes for Timer setting, including Off, Once, Daily, Weekly, Monthly, Monthly to Friday and Saturday to Sunday.
- ✧ Timer Service: There are three options for “Timer Service”, including “TV Channel” and “Radio Channel” (timer setting for channel change and Wakeup/Sleep) and “Record Radio” and “Record TV” (Timer setting for Record TV or Radio program to USB Hard Disk) and Message (reminding message).
- ✧ When you select “Channel” (timer setting for channel change and Wakeup/Sleep) option in “Timer Service”, the screen will display like below:



- i. Channel: Press [OK] key to enter channel list and select channel that you want setting.
- ii. Date: use numeric keys to input your wakeup date.
- iii. On Time: use numeric keys to input your wakeup time. Once the time's up, no matter what the system is in standby

- mode or in playing mode, the system will automatically switch to the channel you want and start to play.
- iv. Duration: After you set a time for “Duration” item, once the time's up, the system will automatically switch to standby mode. If you do not want this function to work, set the duration to 00:00.
- v. Standby After Finish: You can press [Left/Right] to control the system is in standby mode or in playing mode after the record stopped.
- ✧ When you select “Message” (reminding message) option in “Timer Service”, the screen will display like below:
- vi. Wakeup Message: press [left/right] key to select reminding message as Birthday, Anniversary and General.
- vii. Date, you can use numeric keys to input your wakeup date.
- viii. On Time: use numeric keys to input your wakeup time. Once the time's up, no matter what the system is in standby mode or in playing mode, the system will automatically display a reminding message.
- ix. The message will always display on the screen, you can press [Exit] key to close it.
- x. Standby After Finish: You can press [Left/Right] to control the system is in standby mode or in playing mode after the record stopped.
- xi. Extend Record Time : Press [left/right] button or input the number using numeric keys to set the Extend Record Time. It is used to add time at beginning and end of the record time.
- xii. Press [MENU] key to exit the current menu.

11.5 A/V Control

When you enter “TV System” menu, you will see the screen like below:



- ✧ Display Mode is for switching the system output video resolution. Highlight this option and press left or right key, it will switch video resolution circularly by the sequence “Auto<-> by native TV<-> 480i<-> 480P<-> 576i<-> 576p<-> 720P<->1080i-50<->1080i-60<->1080P-50<->1080P-60”.
- ✧ This effect is equal to press V.Format Key under Full Screen and their last setting saving will be efficient for each other. By Source means system will set the video output resolution according to the current program it's playing, different resolution programs switching perhaps will make TV screen flicker. By Native TV means system will be according to the HDMI TV's max supported resolution to set its resolution, if system is not connected to a HDMI TV, it will set resolution to default.
- ✧ Aspect Mode is for switching the screen aspect ratio mode. Now we provide following options: 4:3 PS / 4:3 LB / 16:9/Auto. You can press [Left/Right] key to select each mode circularly. 16:9 will provide user pillar box mode, it means user use 16:9 TV to display but need to see a 4:3 full display picture. System will force press wide screen picture to be narrow and there are black bands on left and right side. Auto means system won't do any aspect ration translation, 16:9 picture source will be good display on a 16:9 TV but will be too narrow on a 4:3 TV, and 4:3 picture source will be too wide in a 16:9 TV but will be good display in a 4:3 TV.

- ✧ Video Output: Press [Left/Right] to select HDMI or RGB.
- ✧ Digital Audio Out is for setting both SPDIF and HDMI's digital audio output mode, it has options LPCM Out, Auto, You can press [Left/Right] Key to select each mode circularly. LPCM Out means system will decode no matter AC3 or PCM audio track data to be LPCM, digital audio decoder or HDMI TV will get LPCM digital audio data. Auto means system will detect which the connected HDMI TV can decode and then output that data. If HDMI TV can decode AC3, system just output RAW data, if HDMI TV can decode LPCM only, system will just decode AC3 or LPCM to be LPCM and then output.
- ✧ Service Switch Mode: Press [left/right] button to select **unblank** or **blank**.
- ✧ Press [MENU] key to draw back from “AV System” menu.

11.6 Miscellaneous Settings

When you enter “Miscellaneous Settings” menu, you will see a screen like below:



- 1 Channel list num: This item provides below options: 1/2/3,you can press [Left/Right] key to select each mode circularly.
- 2 Subtitle Auto: You can press [Left/Right] key to select “On” or “Off”. If the current channel has subtitle information, it will be showed automatically while this function is “ON”, if this function is “OFF”, you need turn on the subtitle manually by pressing [SUBTITLE] key.

- 3 Auto Power Down: You can press [Left/Right] key to select the time or “Off”, if you select time, duration this time if no any operation on receiver, it will go to standby mode.
- 4 Standby mods: if set to “Real”, Press power key receiver will be in real standby status, the consumption will less than 0.5 Watt. if it's set to “Fake” ,Press power key, receiver will be in fake standby status.
- 5 Screen protect: You can press [Left/Right] key to select the time or “Off”, if you select time, Radio full-screen playback duration this time if no any operation on receiver, it will go to Screen protect
- 6 Press [MENU] key to draw back from “Miscellaneous Settings” Menu.

- key to select the value. There are 5 levels of transparency, 10%, 20%, 30%, and 40% and “OFF” (means no transparency function).
- 4 Brightness/Contrast/ Saturation : You can adjust the parameter about the Video image by using the [OK]button or press [left/right] key, the default value is Level 10.
- 5 Load Default OSD Setting : If you are not satisfied with your setting, you can highlight this item and press [OK] key to reset parameters as default value.
- 6 Press [MENU] key to draw back from the “OSD Setting” menu.

11.7 OSD Setting

When you enter the “OSD Setting” menu, you will see a screen like below:



- 1 OSD Timeout: When you switch channels in full screen, there will display information about current channel on the lower part of the screen. Regarding the duration this information is displayed on the screen, you can press [left/right] key to set the time. The range of the duration is “1 second ~ 10seconds”.
- 2 OSD Position: control display position of the info bar in full screen mode. You can choose “bottom” or “top”.
- 3 OSD Transparency: Besides the setting of “OSD Menu Style”, you also can set the transparency of OSD. You can press [left/right]

12.System

When you enter “System” menu, you will see a screen like below:



In “System” menu:

- 1 Press [Up/Down] key to select menu pages among Information, Default Setting, Software Upgrade, Upgrade By USB, Backup to USB
- 2 Press [OK] key to enter the selected item.

12.1 Information



- 1 When you enter “Information” menu, you will see a screen like above. The screen displays :MODEL ID,SW VERSION,H/W VERSION,LOADER VERSION,LATEST UPDATE,STB SN,STB ID,CHIP ID.
- 2 Press [MENU] key to draw back to “Information” menu.

12.2 Default Setting



12.2.1 Default Value:



When you press [OK] key In the “Default Setting” item:

- 1 There will display a dialogue box for you to enter the password, the default password is “0000”.
- 2 After you input the correct password, there will show a warning message asking you “The operation will load default and erase all the channels that user added, continue?”.
- 3 If you select “YES”, all the revised parameters of the receiver will reset to default value. Please use this function carefully.
- 4 In step 1 and step 2, press[Exit]key to draw back from this item without saving.

12.2.2 Delete All Channels:



When you press [OK] key in the “Delete All Channel” item, it will display a dialogue box asking you to confirm to delete all channel. If you select “YES”, all channels will be deleted.

12.2.3 Save default value



When you press [OK] key in the “Save default value” item, there will show a message to ask you “Do you want to set current database as default data?”. If you select “YES”, it will set the current data as default data.

12.3 Software Upgrade



Upgrade by RS232:



1 We offer this function for user to connect receiver (Master) to the other receiver (Slave) via serial interface.

Connect master receiver to slave receiver via serial interface. Enter “Software Upgrade” menu in master receiver and press [Volume Up/Volume Down] keys to switch upgrade mode: All SW+bootloader /All SW+Channel list/Software(no channel list)/Channel list.

2 Moving highlight to “Start” on master receiver and press [OK] key to start upgrade.

3 Turn on slave receiver and it needn't operate any setting.

4 Press [MENU] key to draw back.

Upgrade By Satellite:



This function can upgrade the software through signal lines from the satellite

- 1 Select the satellite and TP or input the TP value and download PID, these parameters you can get from your provider.
- 2 Then move the highlight to the start button and press [OK] button to start upgrade.

12.4 Upgrade By USB



In this menu you can upgrade the software from USB conveniently, Press "Left/Right" button select USB; press ' OK ' button to enter.

In this menu you can select the Upgrade Mode among Software(No channel list), Channel list, All SW+bootloader and All SW+Channel list, and you can select the appropriate upgrade file on "Upgrade File" item. After you select the "Upgrade File" item, press ' OK ' button on "Start" item, the receiver can upgrade automatically.

NOTE:

You must put the upgrade file on the /ROOT DIRECTORY of the USB storage.

12.5 Backup to USB

In this menu ,you can dump the software to the USB equipment

- 1.In "Backup file",you can press [OK] key to edit the file name.; Press "Left/Right" button select USB A ;
- 2.In "Backup to USB", you can press [OK] to start backup software .



13. Conditional Access

13.1 CA Setting



We provide one CA slots for users use. Receiver has build in smart card module with CONAX system. By using cards in this system provided by operators, it is possible to watch many scrambled channels coded in this system. This menu shows detailed information about card inserted into card reader module. It allows inserted according to help messages visible on the bottom of the screen.



Note: All information showed in this menu and submenu are coming from inserted card. In case anything is wrong, there could be a problem with the card. After inserting the card correctly at any time, a message-box will show on the screen with message about detecting the card, in "card info" menu all available information will be displayed. You can press [left/right] key to set the message display time.

14.USB

If you enter the "USB" Menu, you will see the picture like below:

Note: If no USB Hard Disk inserted into the receiver this menu is not available.



14.1 File List

In this menu you can select the file list from USB A . Press [ok] button to enter the File list. you can check the files and folders of the USB storage and you can play MP3 and JPEG files.



14.1.1 Record Files



In this menu you can playback the recorded files, and you can press [Red] key to rename the file, or press [Green] key to lock the file, or press [Yellow] key to delete the file.

You can press [1] key to adjust the volume while you preview the record file on top of the right corner and you can press  to enable or disable the audio.

14.1.2 MP3 Files



In this menu you can select the MP3 file to play by pressing [OK] key or [PLAY] key. Also you can set the play list..

[Red] key: Show play list as the picture bellow:



- **Red Key:**
Move the selected file by pressing Red key and [UP][DOWN] key.
- **Green Key:**
Delete the selected file by pressing Green key.
- **Yellow Key:**

Delete all files by pressing Yellow Key, but there will display a dialog box asking “Delete All” before practical operation, if user selects Yes, all files will be deleted, and the Play list window will close.

- Press OK button to play file.


[Green] key:

All the MP3 files in current directory are added into MP3 play list by pressing [Green] key, and will display “” beside the MP3 files.



[Yellow] key:

To edit the files or folders in the USB storage press this button, you can see the picture like the below.

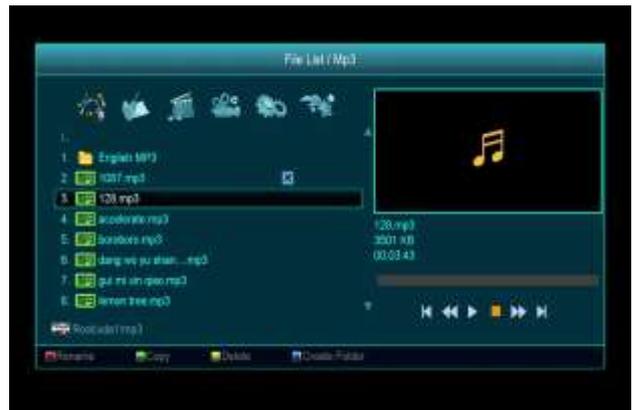

- **Red Key**
To rename the file or folder.
- **Green Key**
To copy the file or folder to another folder.
- **Yellow Key**
To delete the file or folder from the disk.

- **Blue Key**

To create a new folder in the disk.

Press [EXIT] key to draw back to 'EDIT' MENU.

[White] key:

To set the Repeat mode of the MP3 player.



After begin playing MP3, it will show the MP3 play window.

Press "PAUSE" button to pause. Press "PLAY" button to play. Press "STOP" button to stop and time return to 00:00.

Press "PREV" button to jump to the beginning of the file list if play is over 3 seconds; or jump to previous file if play less than 3 seconds.

Press "NEXT" button to go to the next file.

Press "FORWARD" button to go forward 4S.

Press "BACKWARD" button to go back 4S.

Jump to beginning or end if less than 4S to the beginning or end of music file.

Switch to the next file or stop playing by the repeat mode when play is over on the current file.

[0] key: To sort the file list by different order.



[FAV] key: To add mp3 or jpeg to play list.

14.1.3 Image Files



Press 'OK' button on the selected files to play the files.



You can preview the picture at the top right corner if the scroll bar is on the picture files (JPG, BMP), and show the logo when at MP3 file.

Move scroll bar when press up/down key, page up or down by page key.

Go into sub-directory when press ok key in the file directory, play the selected file when scroll

bar is on the file, automatic return to USB menu after play is over.

White key:

In this menu to user can adjust settings for JPEG player.



[0] Key:

Sort the file list by pressing [0] button.

[Red] Key:

Show file play list. There will display “The type of playlist does not exist” if there are no files.

Image view operation

Please see the below image operation menu if Image function is selected.



● **Red Key:**

Move the selected file by pressing Red key and [UP][DOWN] key..

● **Green Key:**

Delete the selected file by pressing Green key.

● **Yellow Key:**

Press Yellow Key to delete all image files in play list, but system will remind you “ Delete All ” before practical operation, if you select Yes, all

files will be deleted and Play list window will be closed.

- Press OK button to play file

[Green] key:

All the Image files in current directory are added into Image play list by pressing Green key, and will display “ ♥ ” beside the Image files, like below.



[Yellow] key:


To edit the files or folders in the USB storage like in MP3 menu. Includes rename, copy, delete and create folder function. You can press [Left/Right] key to previous menu.

[Blue] key

To preview the images press this key, you can see the picture like below.



14.1.4 Video

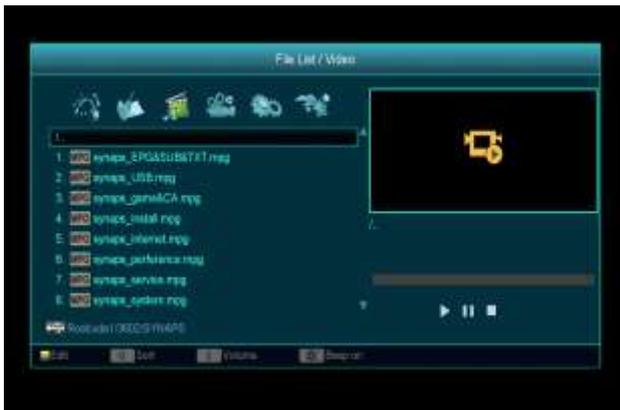


You can see the video files in this menu, it can support .mpeg and .ts format file and press [play] key to preview the video at the top right corner.

You can press [1] key to adjust the volume while you preview the video file, press [0] key to sort the file list, and press [X] to enable or disable the audio

- **Yellow key**

To edit the files or folders. Includes rename, copy, delete and create folder functions. You can press [Left/Right] key to previous menu.

14.1.5 Software

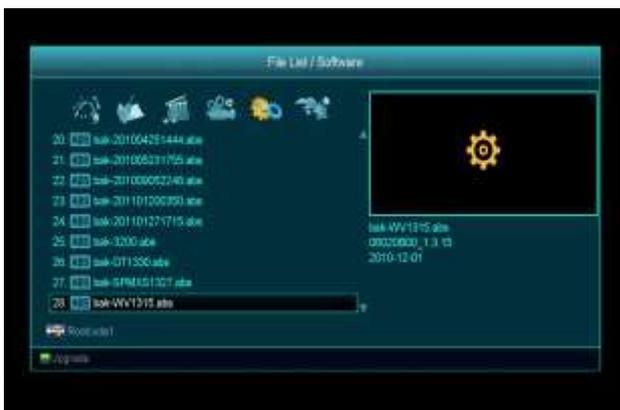

If software exists in current directory, you can press [Green] key to upgrade like below.



14.1.5 All



You can preview all files in this menu.

14.2 Storage Information

Press "OK" button to enter the HDD Information menu like the below picture, in this menu you can see detailed information about the HDD.



If you want to format the HDD, press "yellow" button to enter Format menu, then select the File System between "FAT" and "NTFS", Press "OK" Button to confirm.

Note: If you format the HDD, all the files including MP3, JPEG and the recorded files will be deleted from the HDD.

If you want to change the path for recording files and timeshift files, press “blue” button to enter the DVR Set menu, then press OK button to set the path on current select disc.

14.3 PVR Setting



❖ Time Shift:

ON: Enable the Time Shift function.

OFF: Disable the Time Shift function.

❖ Timeshift to Record

ON: Means when you press the " ● " Button to record the program, it will merge the Timeshift files and the record files.

OFF: Means when you record the program, it will start when you press " ● " button, not include the Timeshift files.

OFF: Means when you record the program, it will start when you press " ● " button, not include the Timeshift files.

OFF: Means when you record the program, it will start when you press " ● " button, not include the Timeshift files.

❖ Record Type

You can select the record type by pressing [left/right] key.

❖ HDD Sleep Time

You can select the HDD sleep time by pressing [left/right] key. When the HDD is not being used, it will sleep after the time you select.

❖ Jump Time


You can select the jump time by pressing [left/right] key.

❖ Default Record time

You can input with numeric keys in this item to set the default record time.

Press [Menu] key to draw back to “PVR Setting” menu.

14.4 USB Speed Test

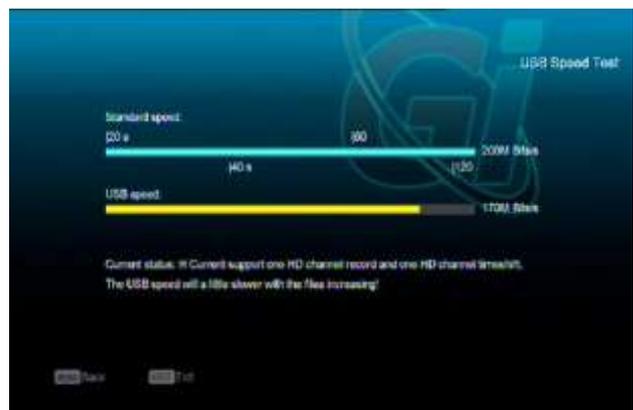

In "USB Speed Test" Menu you can see the Standard speed and your USB harddisk speed, according to this information you can know what operation your disk can support.

14.5 Remove USB Device safely!

Use this menu to remove the USB Device safely.



15.Internet

If you enter the "Internet " Menu, you will see the picture like the below:



You can download new software from the network via LAN port.

15.1 Network Local Setting

1. Select your Network Type as Wired or Wireless, if you select Wireless, you can configure Wi-Fi (wireless) by the following steps:

a. Select Wireless on Default Network Type item.



b. Press [red] button & the wireless LAN network list will appear select you Wi-Fi network and press [ok] button, then input password.




c. Press [OK] button on Connect item to start connecting.

2. In this menu you may assign a dynamic IP address to the digital receiver. To do so, select DHCP On.

3. If you have a static IP address, unselect the DHCP Enable, then the IP Address, Subnet Mask, Gateway and DNS options become enabled. You have to set these options according to your IP address.

15.2 Http Upgrade

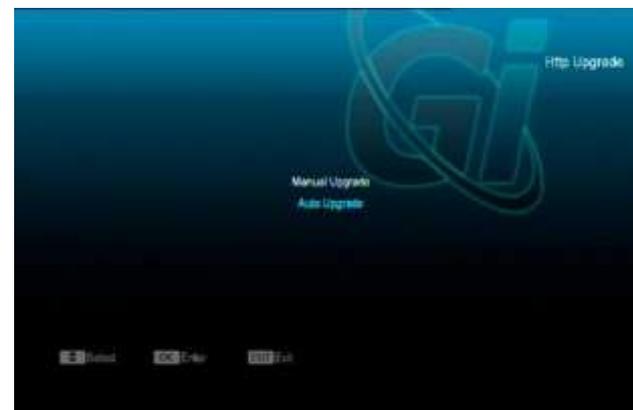

1. When connected to the Internet, the receiver can manually or automatically make software update from file from server.

Note:

This function depends on connection with external server. In case of no software on server, this function will not work.

15.3 FTP Upgrade



When connected to the Internet, receiver can make software update from file from FTP server.

Note:

This function depends on connection with external server. In case of no software on server, this function will not work.

15.4 FTP



When connected to the Internet, receiver can download files, such as software, MP3 or Image files from FTP server.

Note:

This function depends on connection with external server. In case of no any files on server, this function will not work.

15.5 Weather Forecast



In this menu you can see the weather forecast, press [Green] key to add city.



- **Red key**
To update the weather forecast to the latest.
- **Green key**
To add new city use this menu. You can add upto 5 cities.
- **Yellow key**
To delete current city.
- **Blue key**
To switch temperature mode.

15.6 RSS Reader



In this menu you can see the news

- **Red key**
To update the news to the latest.
- **Green key**
To add new channels, you can input a new website. You can add up to 10 channels.



- **Yellow key**
To delete current channel.
- **Blue key**
To edit current channel information. You can edit channel name and channel URL.




Press ok button to see detailed information like below.



15.7 Youtube

This menu is some internet applications. "youtube" can play stream media from "www.youtube.com". When you enter this menu, you will see a screen like below:

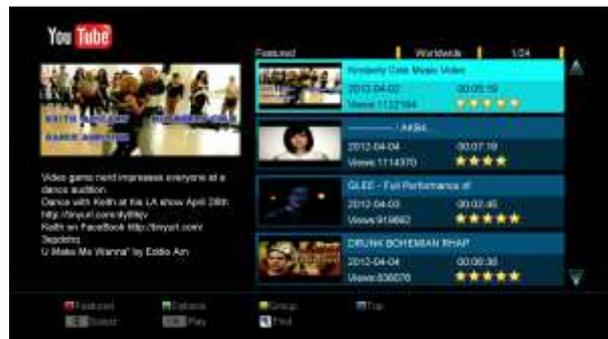

1. Press [up/down] key to move highlight.
2. Press [OK] key on one item, it will play pertinent video. The video will show on top left corner. Press [OK] again, it only shows video in the centre of your screen. Now press [zoom] key, the video will play in full screen.
3. Press [vol+/vol-] to control volume.
4. Press [pause] key to pause video, or press [stop] key to stop play.

5. Press [red] key to display the featured video.
6. Press [green] key to sort by site and duration. The site has Germany, worldwide, Poland and so on. Duration has all time, this week, this month and so on.
7. Press [yellow] key to switch group. These are game, news, tech, move and so on.
8. Press [blue] key to display the top video. These are top favourites, top rated, most views, most recent and so on.
9. Press FIND [Q] key in full screen to open the "Find" window. You can press [←, →, ↑, ↓] keys to move highlight and press [ENTER] key to input the letters .

15.8 Google Maps

Inside the menu can browse Google Maps



16.Game



When you enter "Game" menu, you will see three Games including Tetris, Snake and Othello.

Basic operations:

16.1 Tetris

- a) Move highlight to "Setup" and press [left/right] key to select the game level (speed).
- b) Move highlight to "Start" and press [OK] key to start the game.
- c) Move highlight to [Cancel] key and press [OK] key to draw back from the game.
- d) Start the game:
 - [left/right] key Move shape left or right
 - "Channel Up" Rotate clockwise
 - "Channel Down" Faster drop
 - [OK] Pause/Play the game
 - [Exit] Quit game and draw back to "Game" menu.

16.2 Snake

- a) Move highlight to "Setup" and press [left/right] key to select the game level (speed).
- b) Move highlight to "Start" and press [OK] key to start the game.
- c) Move highlight to [Cancel] key and press [OK] key to draw back from the game.
- d) Start the game:
 - [Left/Right/ Channel UP/Channel Down] use these arrow keys to guide the snake.
 - [OK] Pause/Play game
 - [Exit] Quit game and draw back to "Game" menu.

16.3 Othello

- a) Move highlight to "Setup" and press

-
- [Volume Up/Volume Down] keys to select the game level (degree of difficulty).
- b) Move highlight to “Start” and press [OK] key to start the game.
- c) Move highlight to [Cancel] key and press [OK] key to draw back from the game.
- d) Start the game:
- [Volume Up/Volume Down/Channel UP/Channel Down] use these arrow keys to guide chessman.
 - [OK] set chessman.
 - [Exit] Quit game and draw back to “Game” menu.

17.New Features

17.1 Equalizer

When listening to a Radio program, it will display the music spectrum graphic on TV Screen.



17.2 Time Shift

If you connect the USB HDD, and enable the Time Shift function in the menu "Main Menu/ Record/ PVR Setting/Time Shift", It will start the Time Shift function automatically after you switch the program, and when you press the "Tms" button the Time Shift info bar will display as the following picture:



- 1 You can press " || " button to pause the video, and can save the picture to USB HDD by pressing " P+ " button when the video is paused.
- 2 You can press " <<< " or " >>> " button to Fast Backward or Fast Forward.
- 3 You can press " <<| " or " |>> " button to Slow Backward or Slow Forward.

- 4 Press "left" or "right" button to jump to different position, then press "OK" button to confirm.
- 5 Press "■" button to exit the playback.

17.3 Record

If you connect the USB HDD.

You can press " ● " button to start record function, as following picture:



- ✧ Press " ► " button to display the record info bar when you recording.
- ✧ Press " ● " button again to set record time.



- ✧ You can press " || " button to pause the video, and can save the picture to USB HDD by pressing " P+ " button when the video is paused.
- ✧ You can press " <<< " or " >>> " button to Fast Backward or Fast Forward.
- ✧ You can press " <<| " or " |>> " button to Slow Backward or Slow Forward.
- ✧ Press "left" or "right" button to jump to different position, then press "OK" button to confirm.
- ✧ Press "■" button to stop the recording.

18. Trouble Shooting

If you suspect there is a fault with your receiver, please check the following trouble shooting guide before calling an authorized service agent.

Warning! Under no circumstances attempt to repair the receiver yourself. Tampering with the receiver may result in fatal electric shock and will invalidate your warranty.

Symptom	Possible cause
Settings you made in the menu have not change	The receiver lost power before being able to enter into standby mode Some of the Settings saved by user can be deleted partly or fully
No signal	The level of signal is too weak LNB is out of order The cable from the LNB or Terrestrial antenna is incorrectly Connected (short circuit or open circuit) The position of dish is aligned incorrectly
Receiver is on, but no picture or sound except the following messages (NO TV program)	Channel is not available Channel is scrambled
Receiver not responding to remote control unit	RCU batteries are dead or inserted incorrectly The RCU is pointing toward wrong direction
Poor picture Quality	The level of Signal strength is too low
No sound	The cable is connected incorrectly The Volume level is too low Mute function is active
No display on the VFD Display Panel	The power cord is not plugged in correctly.
No picture on the screen	Receiver is in Standby mode RCA Jack or cable is not connected firmly to the video output port of your television Incorrect channel or video output is selected on your television Brightness level of your TV set is incorrectly defined

19. Specifications

SYSTEM RESOURCES	
Main Processor	594MHz based CPU
Flash Memory	64 Mb
DDR SDRAM	1024 Mb
Tuner/Front-end(Optional)	
Tuner Type	DVB-S / DVB-S2
Input Connector	F-type, Connector, Female
Signal Level	-65 to -25 dBm
LNB Power & Polarization	Vertical: +13V
	Horizontal: +18V
	Current: Max. 400mA
	Overload Protection
22KHz Tone	Frequency: 22±1KHz
DiSEqC Control	Amplitude: 0.6±0.2V
	Version 1.0, 1.1 1.2, USALS Available, unicable
Demodulation	QPSK, 8PSK
Input Symbol Rate	1-45 Mbps, Convolution Code Rate
Forward Error Correction (FEC)	DVB-S 1/2, 2/3, 3/4 5/6, 7/8
	DVB-S2 1/2, 3/5, 2/3, 3/4, 4/5, 5/6, 8/9, 9/10
Tuner Type	DVB-T2/T/C
Input Connector	IEC-type, Connector, Female
Frequency Range	48MHz~862MHz
Input Level	-80.0dBm and -20.0dBm
Active ANT Power	DC 5V at max 75 mA, Overload protection
Bandwidth	VHF/UHF: 1.7MHZ,6MHZ, 7MHZ, 8MHZ
Demodulation	COFDM
Transmission mode(FFT)	1k, 2k, 4k, 8k normal and extended, 16k normal and extended, 32k normal and extended.
Constellations	QPSK, 16-QAM, 64-QAM, 256-QAM
	Both rotated and non-rotated
Guard intervals	1/4, 19/256, 1/8, 19/128, 1/16, 1/32, 1/128
Code rate	DVB-T: Viterbi + Reed Solomon 1/2, 2/3, 3/4, 5/6, 7/8.
	DVB-T2: LPDC + BCH 1/2, 3/5, 2/3, 3/4,5/6.
Scattered Pilot Pattern	PP1, PP2, PP3, PP4, PP5, PP6, PP7, PP8
DVB-T2 Input Profiles	Input Mode A-Signal PLP, input Mode B-Multiple PLPs(Common

	PLP, Type 1 and 2 up to the maximum allowed figure 255)
POWER SUPPLY	
<i>Input Voltage</i>	DC 12V/2A
<i>Power Consumption</i>	15W MAX
MPEG TS A/V Decoding	
<i>Transport Stream</i>	MPEG-2, H.264
<i>Input Rate</i>	Max.120Mbit/s
<i>Aspect Radio</i>	4:3, 16:9, Letter Box
<i>Video Decoding</i>	MPEG-2, MP@ML, MPEG-4 part 10/H264
<i>Video Resolution</i>	720*480P/I, 720*576P/I, 1280*720p, 1920*1080i, 1920*1080P
<i>Audio Decoding</i>	MEPG-1 layer I/II, Mpeg2 layerII, Dolby digital
<i>Audio Mode</i>	Left / Right / Stereo/ Mono
<i>Sampling Rate</i>	32, 44.1 and 48KHz
A/V & DATA INPUT/OUTPUT	
<i>AV OUT(3.5MM Earphone Jack)</i>	Video CVBS output
	Audio L/R output
<i>IR(3.5MM Earphone Jack)</i>	38Khz
<i>RS-232C(3.5MM Earphone Jack)</i>	Transfer rate 115.2Kbps
	9 pin D-sub Type
<i>LAN</i>	10M
<i>USB</i>	One USB 2.0 slot Compatible
<i>HDMI</i>	VER1.3
	Type A
PHYSICAL SPECIFICATION	
<i>Size[L*W*H]</i>	145mmX33mmX110mm
<i>Net Weight</i>	0.23KG
<i>Operation Temperature</i>	0°C~+45°C
<i>Storage Temperature</i>	-10°C~+70°C
<i>Storage Humidity</i>	5%~95% RH (Non-Condensing)